


W W H A R F E D A L E






USER MANUAL

Product Overview

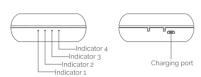

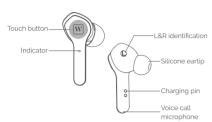

Accessories

1) 1 x WPods charging case

2) 2 x WPods earbuds

3) 1 x charging cable 4) 4 x ear tips

5) 1 x user manual



Control and Functions

Try the different size silicone tips to find the best fit for you. 'R' is for the right ear; 'L' is for the left ear



(2) True Wireless earbuds pairing Fully charge the WPods before initiating pairing.

Step 1 - Remove both earbuds from the charging case.

Step 2 - Place the earbuds in your ears to hear the voice prompt. Once paired, voices prompt from both earbuds inform "Connected right channet" and "Connected left channel"



*If connection fails or only one earbud is connected, please power-off and then power-on earbuds simultaneously, by pressing and holding the touch control buttons for 10 seconds. Listen closely to the voice prompts for 'connected' notification.

(3) Connect a Bluetooth® device On your device, turn on the Bluetooth® and select 'WPods' on your device list. Once connected, a notification sound prompts.



* In case of a connection error, or if two WPods options exist in your device list, please power-off and power-on earbuds simultaneously, by pressing and holding the touch control buttons for 10 seconds. Listen closely to the voice prompts for 'connected' notification





(4) Single earbud mode (hands-free mode) 'L' earbud cannot be used for single earbud mode.

Step 1 - Take out the 'R' earbud.

Step 2 - Put the earbuds in your ears to hear the voice prompt. Once paired, the voices prompt "Pairing successfully, connected".



Step 3 - Follow (3) to connect to your mobile device.

(5) Reset for re-pairing

Step 1 - Power-off the earbuds and turn off the Bluetooth® on your device. Please delete 'WPods' on your device list before turning off the Bluetooth®

Step 2 - Hold and press the earbuds for 10 seconds until the LED on the 'R' earbud blinks red and blue swiftly; the LED on the 'L' earbud flash blue slowly, meaning successful reset.




Step 3 - Follow (3) to reconnect to your mobile

*To turn single earbud mode into binaural earbuds mode, please reset as per above.

(6) Touch button operations

* Please keep it away from radio interference and avoid noisy environments when using earbuds. A high auality format of music or local music of the device is

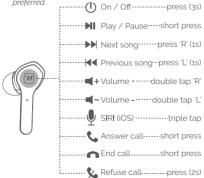

(7) Charging case battery level

case and the LEDs will glow for 4 seconds.

1 light: 0% - 25% low battery 2 lights: 25% - 50% recharge 3 lights: 50% - 75% recharge 4 lights: 75% - 100% recharge

(8) Earbud battery level The mobile device will auto-display the battery level of the earbuds when connected. Check the upper right corner of your device's screen.



(9) Status indicators of the closed charging case 1st light on: charging for the right earbuc 2nd light on: charging for the left earbud

(10) Power charging

Charging case: charged by micro USB cable Charging time: 1 hour

Earbuds: charged via the charging case

Charging time: 45 mins Both earbuds will automatically power-off and recharge when putting in the charging case.

Introduction

Wharfedale WPods are True Wireless Stereo in-ear earphones that offer a truly cable free personal music experience! WPods feature a carefully tuned DSP for riveting bass and pristine musical transparency, true to the Wharfedale sound signature. WPods utilise Bluetooth® 5.0 technology for ultra-stable operation with intuitive touch-sensitive controls too.

Perfect for the active lifestyle, not only light weight (each earbud is only 5g!), they are discreet and extremely comfortable. WPods are also IPX4 rated for a splash-proof and sweat-proof operation - enjoy your music outdoors, whatever the weather, and even in the

The handy compact carry case recharges the WPods each time they are returned to the case. With 4 hours of continuous music playback and a total of 12 hours auto-recharging, the music just keeps on playing!

Specifications

Driver:

4 hours per charge (16 hours Play Time:

in total with charging case) ≥10m

Wireless Range: 5.6mm 16.0hm Bluetooth® Profile: HSP, HFP, A2DP, AVRCP 16Ω

Impedace Earbuds Battery Capacity: Case Battery Capacity: 55mAh x 2 300mAh Sound Pressure Level: Frequency Response: 98±3dB 20Hz**-**20kHz Weight (each earbud): 5g



Warning:

This product contains magnets. We recommend that you keep it away from the magnetically sensitive items.

Notice:

Do not disassemble or remove any part of the WPods true wireless earbuds - there are no user serviceable parts and any such process will void the warranty.

Please keep the WPods true wireless earbuds away from extreme heat and fire. Do not incinerate or dispose of in fire.

Should you notice any bloating or shape changing of the WPods true wireless earbuds, this may indicate a damaged battery cell. In this very unlikely event, please do not use the WPods true wireless earbuds. We recommend that you contact your local Wharfedale service centre.

Please only use certified micro USB cables for charging. Do not attempt to charge in any other way. This may cause damage to the battery with risk of fire or

Please follow the instructions for correct disposal of the WPods true wireless earbuds, in compliance with all local environmental laws.

Safety Instruction

- 1) Please follow the rules outlined in this guide closely to enjoy the WPods true wireless earbuds fully and ensure safe operation.
- 2) The WPods true wireless earbuds are IPX4 splash and sweat resistant. Note: they cannot be fully submerged under water. The charging case is not waterproof. Please do not expose directly to water, resis or time ide. rain, or liquids.
- 3) In case of any damage to the WPods true wireless earbuds, be cautious of any edges, uneven surface, metal parts etc to prevent possible injury or
- 4) Keep out of reach of children due to small parts and choking hazard.
- Please do not modify, repair or dismantle the product. Incorrect handling may cause short circuit, damage and even fire and it will void the warranty.
- 6) Please do not clean the WPods true wireless earbuds' surface with any harsh bleach or cleaning solvent. The device should only be wiped with a clean damp cloth and mild soap
- 7) Refrain from dropping, bumping or asserting pressure on the WPods true wireless earbuds.
- 8) Please do not use it in hazardous locations or around sensitive equipment due to the presence of wireless signals which may cause interference.
- g) Should any abnormal situations or problems occur while using this product, discontinue its use immediately
- 10) Do not expose to open fire and high temperature, as this may damage the internal circuitry and rechargeable battery, with risk of explosion.

A: Check to confirm the earbuds are charged. Follow

O: Problems charging?
 A: Check to confirm the earbud charging pins are securely connected to the charging contacts.
 A: Check the micro USB connection.

O: Noise and echo during calls?
A: The volume may be too high or external noise may be too loud. Please adjust the volume.

FAQs

Please refer to the following for simple troubleshooting. For further questions visit Wharfedale.co.uk or contact your local Wharfedale distributor or dealer.

- Q: The earbuds disconnect with mobile devices?
 A: Check to confirm the earbuds are charged. Follow
- the (to) recharge instructions.

 A: On your device, delete WPods true wireless earbuds from the Bluetooth® list. Then, turn the Bluetooth® off and then on. Reset the earbuds. Follow the (5) reset instructions. Connect again.
- A: Check to confirm the earbuds are charged. Follow the (10) recharge instructions.

 A: Reset the earbuds. Follow the (5) reset instructions.
- Q: 'L' and 'R' earbuds cannot auto-pair together A: Check to confirm the earbuds are charged. Follow
- the (10) recharge instructions.

 A: Reset the earbuds. Follow the (5) reset instructions.
- Q: Low volume or low bass? A: The earbuds are not properly positioned in your ears. Adjust the earbuds' position, adjust the volume

or try changing the silicone ear tips.

Q: The earbuds do not power-on?

the (10) recharge instructions.

- Q: Signal is interrupted?
- A: Reconnect the earbuds to your device or move closer to playback devices.

For technical support, services or product inquiries Please contact your local distributors

IAG House, 13/14 Glebe Road, Huntingdon, Cambridgeshire, PE29 7DL, UK.

Tel: +44 (0) 1480 452561